# 

### **INSTRUCTION MANUAL**

## **TIE-CLIP MICROPHONE**


## YP-M101

Thank you for purchasing TOA's Tie-Clip Microphone. Please carefully follow the instructions in this manual to ensure long, trouble-free use of your equipment.

#### **1. GENERAL DESCRIPTION**


The YP-M101 is a tie-clip type microphone designed to be exclusively used with an optional WM-1100 Portable Transmitter.

#### 2. NOMENCLATURE

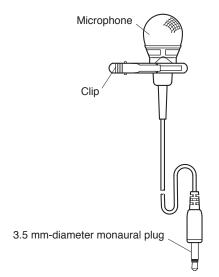

#### **3. CLIP ATTACHMENT**

Attach the supplied clip as shown in the figure.

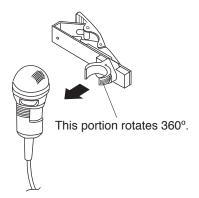

#### 4. HOW TO USE

- Keep the microphone 15 20 cm away from the mouth when using.
- Take care not to speak loud or position the microphone too close (within 5 cm) to the mouth, because this could muffle sounds and make them inaudible.

#### **5. SPECIFICATIONS**

Туре	Electret condenser type
Directivity	Unidirectional
Sensitivity	-46 dB (0 dB=1 V/Pa,
	1 kHz, load: 2 kΩ)
Maximum Input Sound	115 dB SPL
Pressure	
Terminal	ø3.5 mm monaural plug
Cord Length	80 cm
Finish	Dark gray
Weight	20 g (cable included)

**Note:** The design and specifications are subject to change without notice for improvement.

#### Accessory

Clip ..... 1

URL: http://www.toa.jp/

133-05-307-8A